

ASSEMBLY INSTRUCTIONS

Model #U30223 - Kitchen Island Cart 33"(H) X 38"(W) X 20"(D)




MATERIAL LIST:

- 8 - Plastic Tapered Sleeves
- 4 ea. - 3" Casters (2 Locking)
- 2 - 18" x 36" Industrial Style Shelves
- 4 - Posts
- 1 - 20"x38"x1.2" Thick Wood Top


NOTE: Please dispose of loose, round plastic pieces. These are used to separate the shelves for shipping purposes.

Helpful Hint: When placing the plastic tapered sleeves onto the posts, slide the plastic tapered sleeves up or down on the post until you feel it "snap" into the groove of the post. It is normal to have a slight gap in-between the two pieces of the plastic tapered sleeves when it is placed on the post.

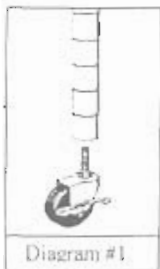

STEP 1 Install the casters by screwing them into the threaded holes in the bottom of the posts. (See Diagram #1)


STEP 2 Choose the desired height of the bottom shelf (for added stability, it is recommended that the bottom shelf is installed no more than 6" (2 - 3 lines) from the floor.) Snap the plastic tapered sleeves (with arrows facing up and/or the narrow ends of the tapered sleeves toward the top of the unit) at the desired height on each post. (See Diagram #2) Shelves can be adjusted every 1". (Note: Double grooves in the posts are placed periodically for simple shelf height reference.)

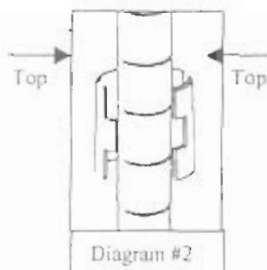

STEP 3 Place shelf on its side, making sure the wider portion of the 4 round collars are facing the bottom of the unit, slide the top of the posts through the round collars on each corner of the shelf. (See Diagram #3) Push the shelf firmly onto the plastic tapered sleeves.

STEP 4 After installing the bottom shelf and casters, set the unit upright.

STEP 5 Snap the plastic tapered sleeves into place on posts at the next desired shelf height. Slide the shelf down from the top of the posts onto the plastic tapered sleeves. (Note: After installing all shelves, a rubber mallet may be used to gently tap each corner of the shelves so they firmly install onto the plastic tapered sleeves.) (Note: Make sure to leave enough room at the top of the unit for installing the wood top.)

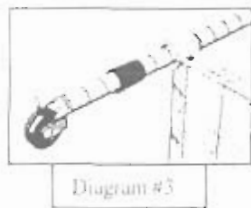

STEP 6 Place the wood top gently on top of the assembled unit, making sure to insert the posts into the pre-drilled holes in the bottom of the wood top.

Note: Two of the casters can be locked in place by turning the steel lock mechanism on the side of the casters.

WARNING: DO NOT CLIMB OR STEP ON THE CART!!
DO NOT TILT!!
HEAVY OBJECTS MUST BE PLACED--NOT DROPPED--ONTO THE SHELVES!!
DONOT PLACE HOT ITEMS ON WOOD SHELF - IT WILL LEAVE BURN MARKS!!

NOTE: HEAVIEST OBJECTS MUST BE STORED ON LOWER SHELVES AND LIGHTER OBJECTS ON UPPER SHELVES!!