




## 6-Shelf Chrome Storage Parts Back Ledge

### ASSEMBLY INSTRUCTIONS:


#### Step 1

Hold the back ledge with the truss

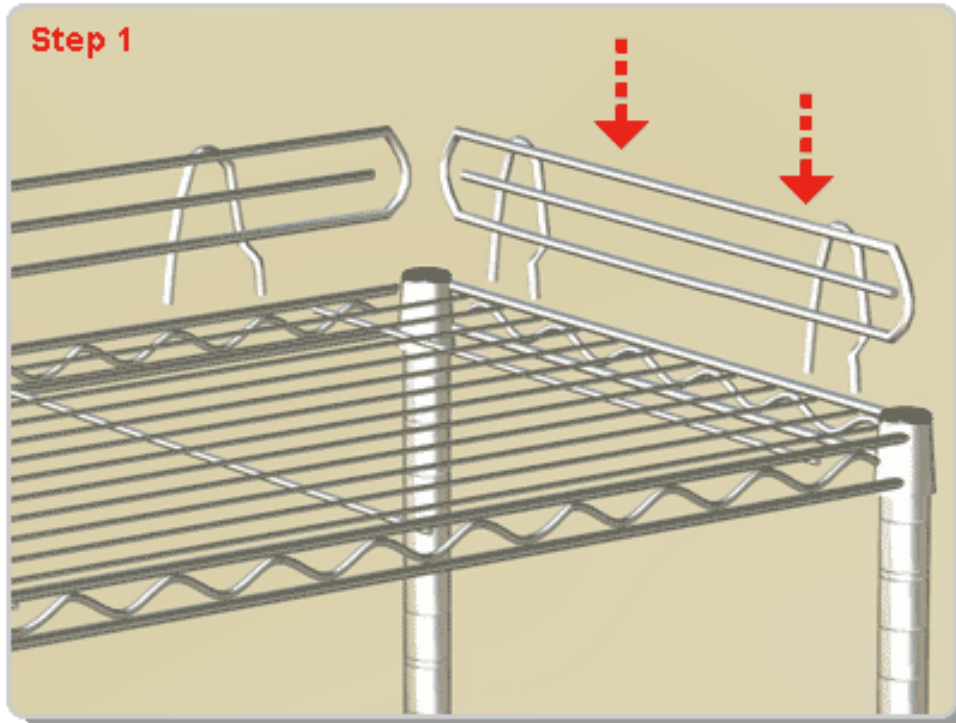


#### Step 2

Gently rock the back ledge into position and then use some force until notches on the truss snap into position.

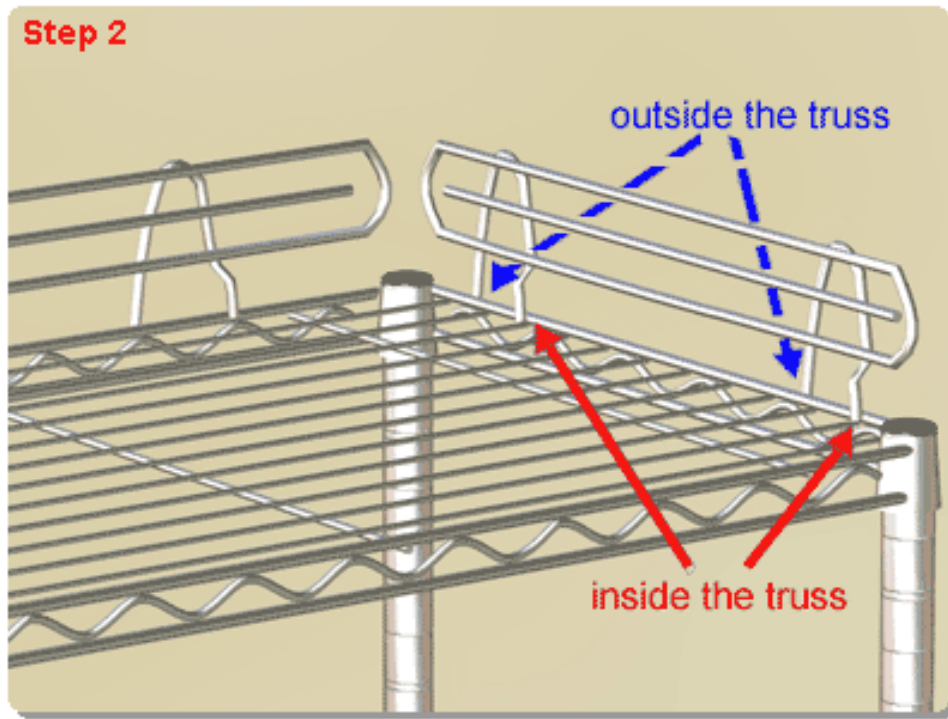

\*\*A rubber mallet may be required to push the notches into position.

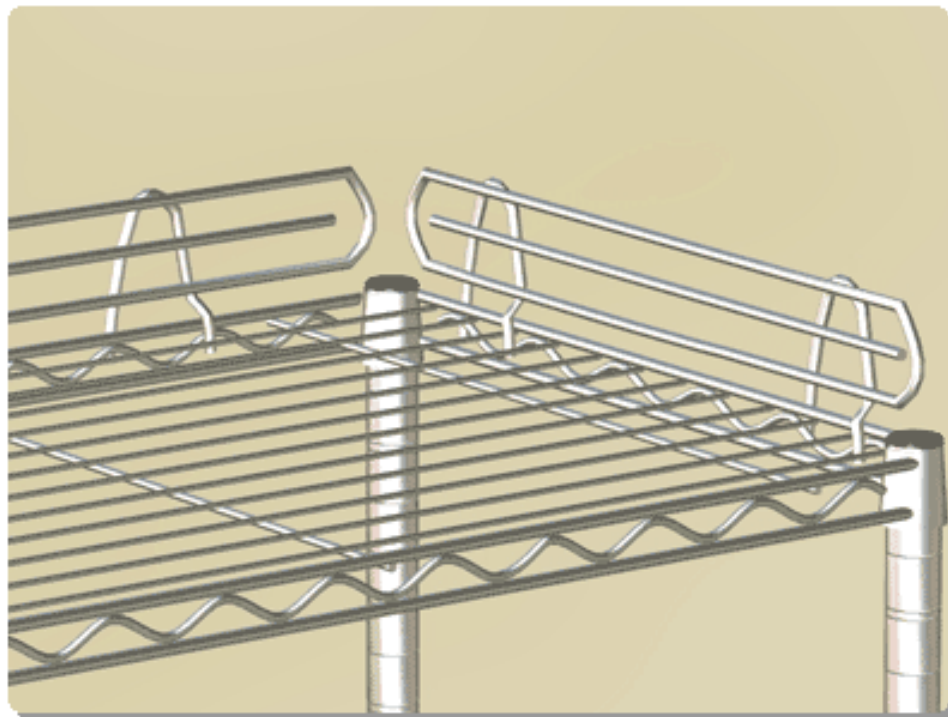

Copyright © Protrend US 2004, All Rights Reserved.