



## ASSEMBLY INSTRUCTIONS

### STEP 1:

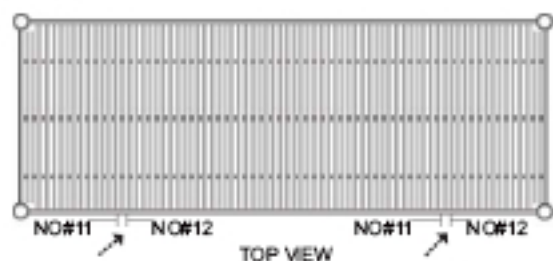


FIND TWO LOCATIONS TO PUT BOTH HOOKS ON SHELF. WE RECOMMEND THAT HOOKS SHOULD BE INSERTED BETWEEN NO#11 and NO#12.

### STEP 2:

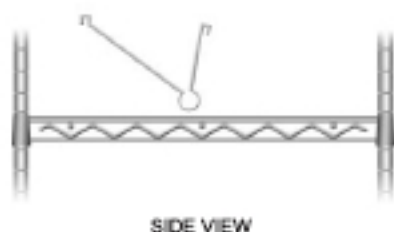


INSERT BOTH HOOKS FROM TOP SHELF AT THE SAME TIME.

### STEP 3:

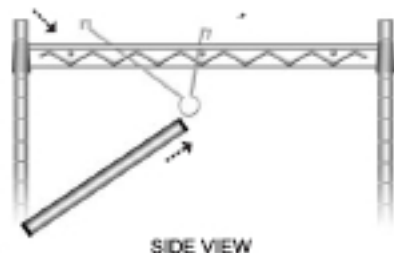

FIRST, PASS ROD THRU HOOKS. SECOND, CLIP HOOKS ONTO SHLEF.

### STEP 4:

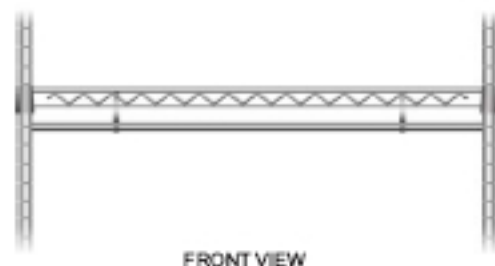

ASSEMBLY COMPLETE